



User Guide CADDs - NX

Product Category	CADTranslate
Product Group	CADDs <> NX
Product Release Version	27.3

Document Type	User Guide
Document Status	Released
Document Revision	3.0
Document Author	Bruce Pittman
Document Issued	23/01/2025

📍 THEOREM HOUSE
MARSTON PARK
BONEHILL RD
TAMWORTH
B78 3HU
UNITED KINGDOM

☎ +44(0)1827 305 350

📍 THEOREM SOLUTIONS INC.
100 WEST BIG BEAVER
TROY
MICHIGAN
48084
USA

☎ +(513) 576 1100

Contents

Overview of TRANSLATE.....	3
<i>About Theorem</i>	<i>3</i>
<i>Theorem’s Product Suite</i>	<i>4</i>
CADTranslate	4
CADPublish.....	4
TheoremXR	4
The CADDs Bi-directional NX Translator.....	5
Getting Started	5
<i>Documentation & Installation Media.....</i>	<i>5</i>
<i>Installation</i>	<i>5</i>
<i>License Configuration.....</i>	<i>5</i>
<i>Using the Product.....</i>	<i>5</i>
Using the Product.....	6
<i>Default Translations.....</i>	<i>6</i>
Default Translation – via the Unified Interface.....	6
Default Translation – via the Command Line.....	8
CADDs to NX Arguments List	9
<i>CADDs Read Arguments.....</i>	<i>9</i>
<i>NX Write Arguments</i>	<i>9</i>
NX to CADDs Arguments List	10
<i>NX Read Arguments List.....</i>	<i>10</i>
<i>CADDs Write Arguments.....</i>	<i>11</i>

Overview of TRANSLATE

About Theorem




Theorem Solutions is a world leader in the field of Engineering Data Services and Solutions. This leadership position stems from the quality of our technology and the people in the company. Quality comes not only from the skills and commitment of our staff, but also from the vigorous industrial use of our technology & services by world leading customers.

We are proud that the vast majority of the world's leading Automotive, Aerospace, Defense, Power Generation and Transportation companies and their Supply chains use our products and services daily. Working closely with our customers, to both fully understand their requirements and feed their input into our development processes has significantly contributed to our technology and industry knowledge.

Theorem Solutions is an independent UK headquartered company incorporated in 1990, with sales and support offices in the UK and USA. Theorem has strong relationships with the major CAD and PLM vendors, including; Autodesk, Dassault Systemes, Icem Technologies (a Dassault company), PTC, SolidWorks, Spatial Technology and Siemens PLM Software. These relationships enable us to deliver best in class services and solutions to engineering companies worldwide.

Theorem's Product Suite

Theorem have 3 main Product brands. These are:

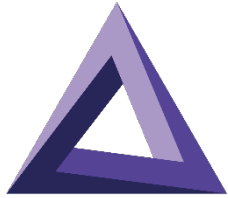


CADTranslate

CADTranslate

Direct translation of 3D data to or from an alternate CAD, Visualization or Standards Based format.

See our [website](#) for more detail.

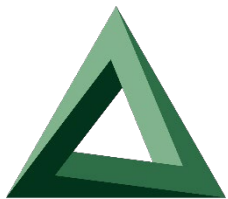

CADPublish

CADPublish

The creation of documents enriched with 3D content

See our [website](#) for more detail.



TheoremXR

TheoremXR

Visualization for [Augmented \(AR\)](#), [Mixed \(MR\)](#) and [Virtual \(VR\)](#) Reality applications

See our [website](#) for more detail.

The CADDs Bi-directional NX Translator

Getting Started

Documentation & Installation Media

The latest copy of the User Guide documentation can be found on our web site at:

<http://www.theorem.com/Documentation>

Each product has a specific link that provides user documentation in the form of PDF and Tutorials.

The latest copy of Theorem software can be found via the link above and by searching for the specific product. Each product has a specific link to the Product Release Document, which contains a link to the download location of the installation CD.

Alternatively, you can request a copy of the software to be shipped on a physical CD.

Installation

The installation is run from the .msi file download provided. For full details of the installation process, visit www.theorem.com/documentation and select UI from the product selection list.

License Configuration

To run any product a valid license file is required. The Flex License Manager is run from the .msi file download provided. For full details of the installation process, visit www.theorem.com/documentation

Using the Product

To use the product, follow the documented steps found in this document or follow the online video tutorials which can be found from www.theorem.com/documentation

Using the Product

Default Translations


Default Translation – via the Unified Interface

The Unified Interface can be started via the Start Menu – if a shortcut was added during installation.

Alternatively, the Unified Interface can be run via a Windows Explorer selection in:


```
<UI_installation_directory>\bin\Unified_Interface.cmd
```


The following interface will be launched:

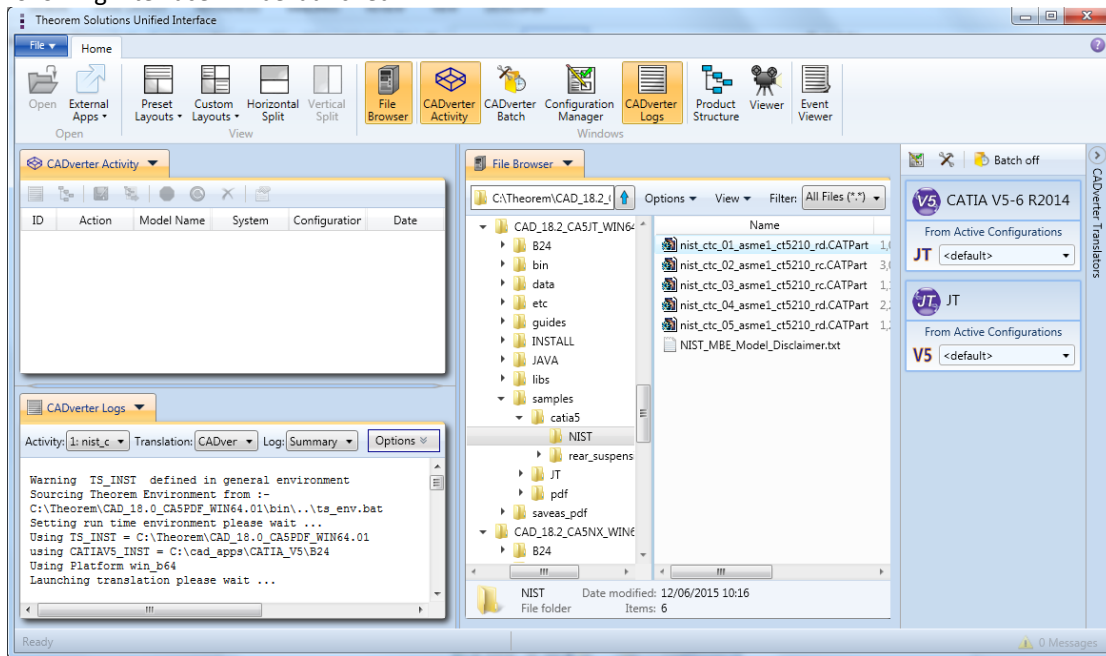

The default layout is split into 4 primary areas, which can be altered to the users prefer:


The simplest way to translate from CATIA V5 or JT is to drag a file from the file Browser Pane on to the Active Configurations for the translation you require.

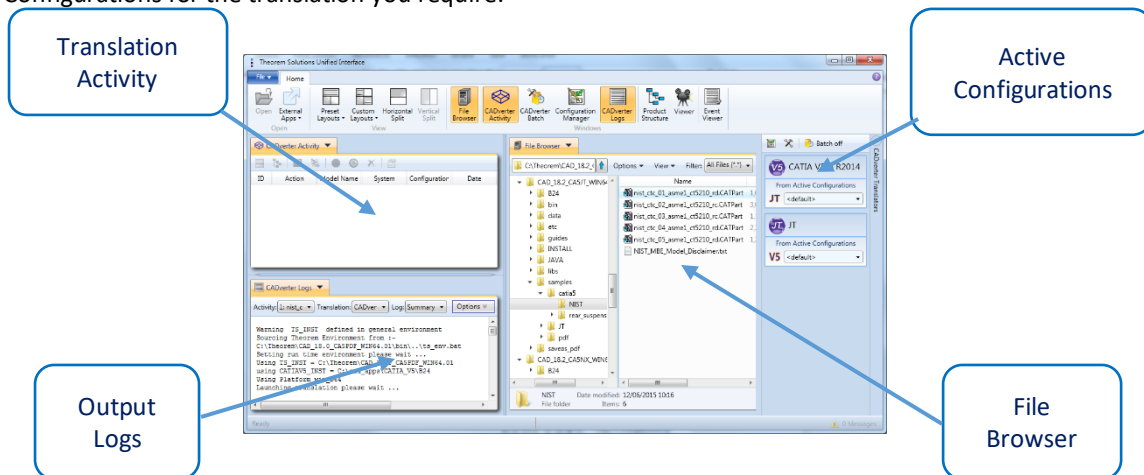

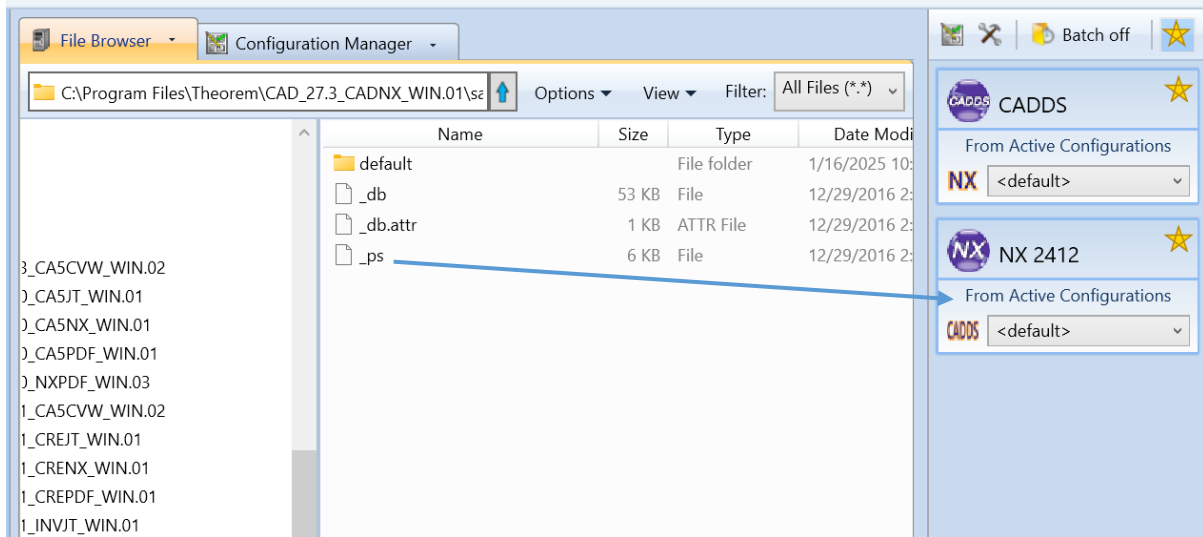

On completion, the Unified Interface will display the activity information and details from the log file created during the translation, if requested, in the Translation Activity and Output Log panes, respectively.

The generated output data can be located by selecting the translation from the Activity pane and opening the output folder:

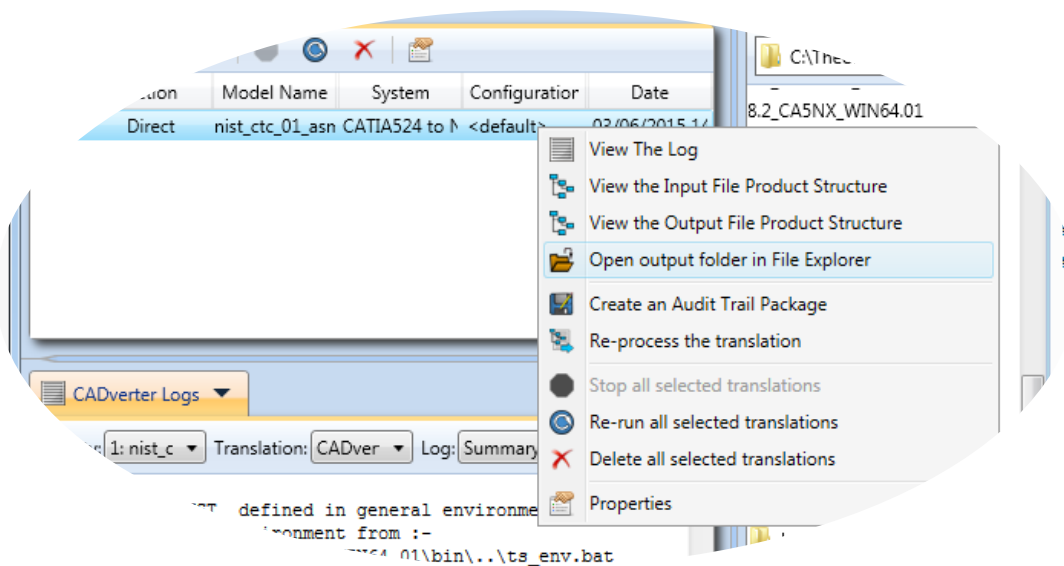

Default Translation – via the Command Line

Running a translation via the command line can be carried out via the *cad_run.cmd* file located in the *<installation_directory>\bin* directory. The format of the command is as follows when translating from CADD5 to NX:

```
<Translator_installation_directory>\bin\cad_run.cmd CADD5_NX[XX] <input_file>  
<output_file>
```

The format of the command is as follows when translating from NX to CADD5:

```
<Translator_installation_directory>\bin\cad_run.cmd NX[XX]_CADD5 <input_file>  
<output_file>
```

Alternate for assm:

```
"<Translator_installation_directory>\bin\cadd5_NX[XX].cmd" "<input_file>"  
"<output_file>" search_path "<parts_dir1>";"<Parts_dir2>" progress_file  
"<Path_to_progress_log\.txt>"
```

(Note! Replace the [XX] seen in the example with the version of NX you are using. E.g. for NX4212 change to NX2412):

Customizing Translation Output

The following sections describe, in outline, available command line arguments to customize the output of the CADD5 to NX translator.

Some of these arguments are available via the Unified Interface. All can be used as additional arguments on the default command line:

CADDs to NX Arguments List

CADDs Read Arguments

Each of these options is described below.

Option	Description
Maintain Blanked Entities	Read blanked entities and maintain their show/hid state Default is OFF <ul style="list-style-type: none"> ○ Command Line Syntax <ul style="list-style-type: none"> ▪ <i>maintain_blancked</i>
Use CADDs Entity Colours	Use CADDs entity colours rather than part colours <ul style="list-style-type: none"> ○ Command Line Syntax: <ul style="list-style-type: none"> ▪ <i>ecol</i>
Assembly Search Path	Specify the search paths that contain assembly parts <ul style="list-style-type: none"> ○ Command Line Syntax: <ul style="list-style-type: none"> • <p>SEARCH_PATH "PATH1;PATH 2;PATH3"</p> <p>OR</p> <p>SEARCH_PATH <Filename></p> <p>Where the file contains per line the paths to search i.e.</p> <p>PATH1 PATH 2 PATH3</p>
Name Assembly Nodes from Associated Geometry File	<ul style="list-style-type: none"> ○ Command Line Syntax: Default is OFF <ul style="list-style-type: none"> ▪ <i>mapitem</i>
Process Part Revision Information	Read assembly revision info from _ps file <ul style="list-style-type: none"> ○ Command Line Syntax: <ul style="list-style-type: none"> ▪ <i>read_rev</i>
Assembly Units	Specify the units when reading an assembly <ul style="list-style-type: none"> ○ Command Line Syntax: <ul style="list-style-type: none"> ▪ <i>assy_units <mm/inch></i>

NX Write Arguments

CMD LINE Option	Purpose	Data Type	Default
poly_sol/no_poly_sol	For gco Fsolids produce Facetted bodies (else attempt brep)	Flag	off
heal_ug <tol> [def tol = 0.0095/units]	attempt a UG heal on the created body (if nocheck on)	Flag	off

keep_all_bodies/no_keep_all_bodies	If input solid gets created as a solid after sewing, plus one or more tiny sheet bodies, keep or delete these	Flag	on (keep all)
nocheck	Don't check created Parasolid geometric entities	Flag	off
no_brep_prep	Prepare solids switched off	Flag	on (surfs read as nurbs+prep)
pstolmodel <num>/nopstolmodel [def num = 3]	Enable Parasolid tolerant modeling	Flag	on
pssew <tol>/nosew	Sew failed breps and opensols	Flag	on
csg_prep <tol> [def tol = 0.000001*scale]	Prepare CSG Primitives	Flag	off
csg_shift <tol> [def tol = 0.000001*scale]	Change CSG Shift Distance	Flag	off
csgfix	Fix CSG Primitives	Flag	off
ps_fix_small/no_fix_ps_small	Remove small edges, sliver and spike faces in breps	Flag	off
ps_fix_osol/no_ps_fix_osol	Remove small edges, sliver and spike faces in opensolids	Flag	off

NX to CADD5 Arguments List


NX Read Arguments List

CMD LINE Option	Purpose	Data Type	Default
read_name no_read_name	Read UG entity names (if they exist)	Flag	off
part_layer	Process As Saved part layers, else All	Flag	ALL
read_pmi	Read PMI as stroked data	Flag	off
noprep/prepsol	Prepare solids switched off / on	Flag	on (surfs read as nurbs+prep)
rd_native_edge/no_read_native_edge	Read native edge curves	Flag	off (read as nurbs curves)
trim_face_surfs/no_trim_face_surfs	Trim surface to face	Flag	off (don't trim)
ugdiags	Switch on validate read to progress file	Flag	off
read_diags	Switch on read diagnostics to progress file	Flag	off
no_mergen	No Parasolid merging of entities	Flag	on (merge)
checksol/nochecksol	Check Parasolid entities before read	Flag	off (don't check)

noprep/prepsol	Prepare solids switched off / on	Flag	on (surfs read as nurbs+prep)
mprops	Read Mass Props	Flag	off
draft	Process 2D drawings	Flag	off

CADD5 Write Arguments

The image below shows the Write CADD5 arguments that are available, with their default settings.

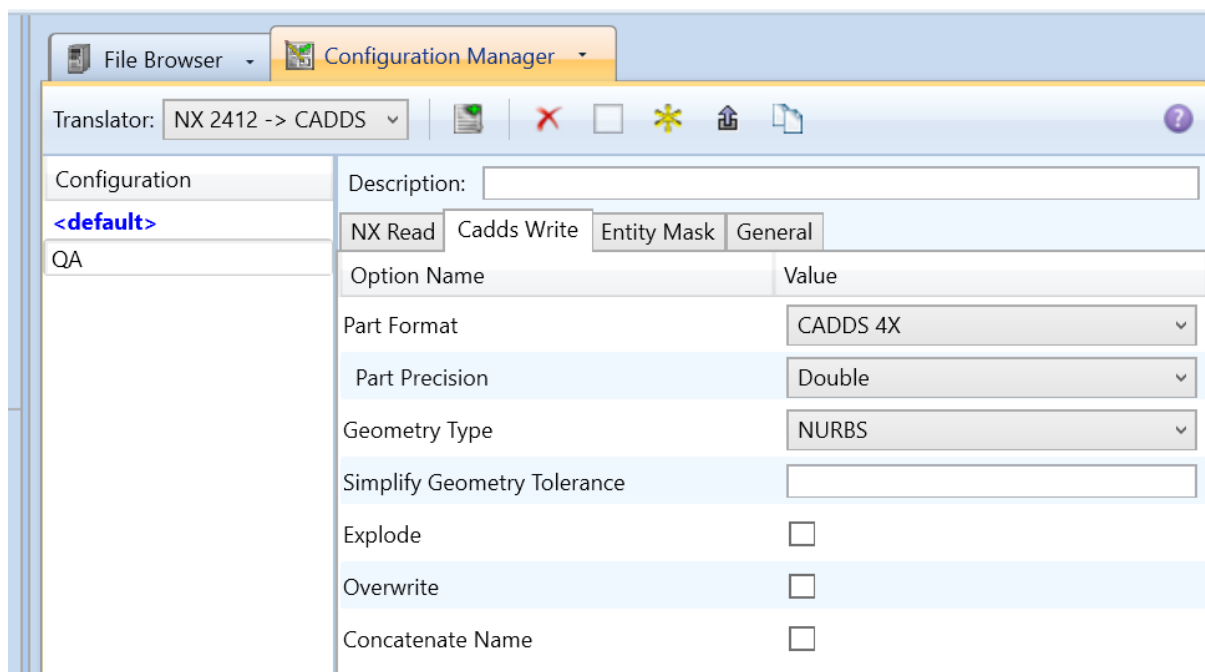

Each of these options is described below:

Option	Description
Part Format	Defines the format of the output file to be cadd54x or cadd55 - Default is cadd54x <ul style="list-style-type: none"> ○ Command Line Syntax <ul style="list-style-type: none"> ▪ cadd55
Part Precision	Specifies the output part to be written in single or double precision Default is double <ul style="list-style-type: none"> ○ Command Line Syntax <ul style="list-style-type: none"> ▪ <i>single</i>
Geometry Type	Defines whether NURBS or ASD geometry is written – default is NURBS <ul style="list-style-type: none"> ○ Command Line Syntax <ul style="list-style-type: none"> ▪ <i>asd</i>
Simplify Geometry Tolerance	Tolerance value for CADD5 simplify of psurfs Default tol =0.001 in part units <ul style="list-style-type: none"> ○ Command Line Syntax <ul style="list-style-type: none"> ▪ c4simplify <tol>
Explode	Explode brep to faces

	Default off <ul style="list-style-type: none"> ○ Command Line Syntax <ul style="list-style-type: none"> ▪ split_brep
Overwrite	Overwrite existing parts default=use existing parts <ul style="list-style-type: none"> ○ Command Line Syntax <ul style="list-style-type: none"> ▪ <i>no_overwrite – use existing parts</i> ▪ <i>overwrite – overwrite existing parts</i>
Concatenate Name	concatenate top level assy name to all subcomponents default= no_concat_assy <ul style="list-style-type: none"> ○ Command Line Syntax <ul style="list-style-type: none"> ▪ concat_assy/no_concat_assy